


low installation linear guide

3D view

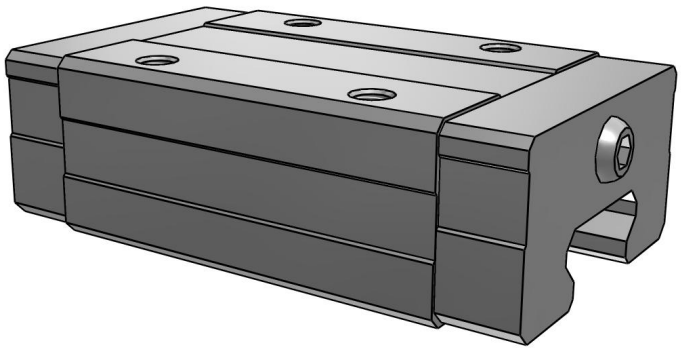

HOW TO ACTIVATE 3D?

To activate the interactive 3D view in Acrobat Reader, you need to select, at the top of the page, **Options** and then **Trust this document**

Zoom

Moves you toward or away from objects in the scene when you drag vertically. You can also zoom with the hand tool by holding down Shift as you drag.

Pan

Moves the model vertically and horizontally only. You can also pan with the hand tool: Ctrl-drag.


Rotate

Turns 3D objects around relative to the screen. How the objects move depends on the starting view, where you start dragging and the direction in which you drag.

Augmented Reality (AR) - Digital meets real


Augmented Reality, often shortened to AR, is a technology that blends digital information into the real world.
For more information, please click here or directly try yourself by scanning the QR code with your phone.

SCAN ME

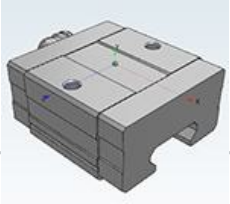


low installation linear guide

2D derivation

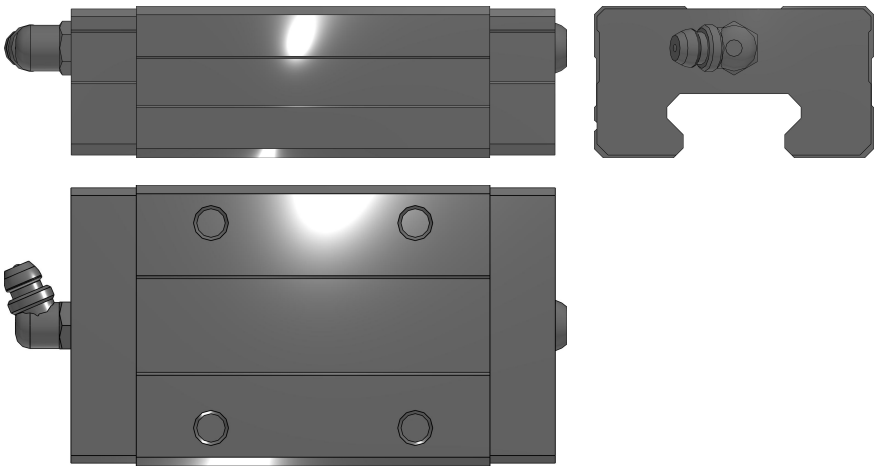


ISO view

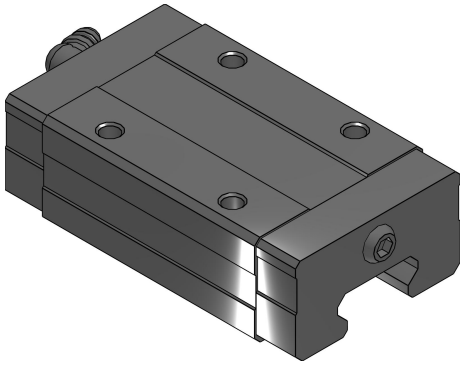


Bill-Of-Materials


N°	Description	Amount
1.1	LSD25BK-HN-N-D-M6	1

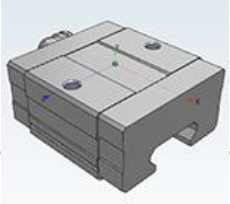


low installation linear guide

Technical drawings

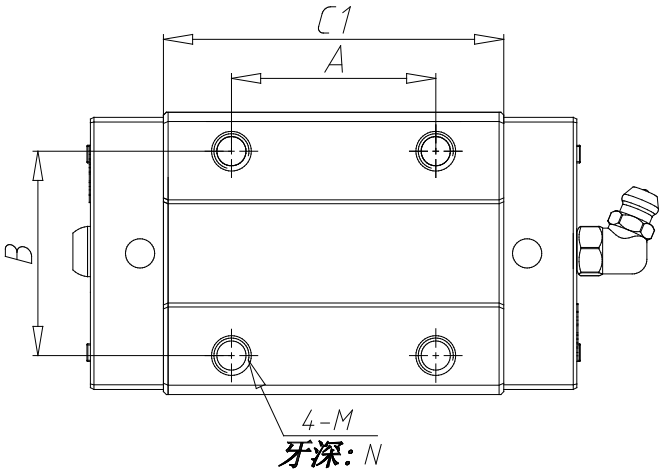

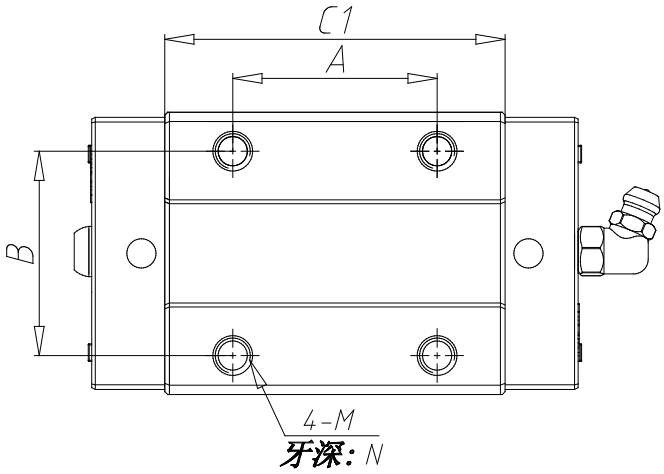


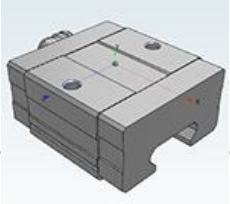

low installation linear guide

Technical data


ORDER (Ordering code)	LSD25BK-HN-N-D-M6
RBBC (Block surface treatment)	Without black chrome
WOR (wide type of rail)	25
BS (block style)	Square style
BT (block type)	N: Standard type
ACCE (accuracy)	N: Normal
PL (Pairing level)	D Level
MT (Oil mouth type)	M6 Oil mouth
DA (Dustproof accessory)	None
A ()	35
B ()	35
C1 ()	60.6
K ()	7.2
D ()	13.1
M ()	M6X1.0
N ()	9
T ()	0.0
T1 ()	0.0

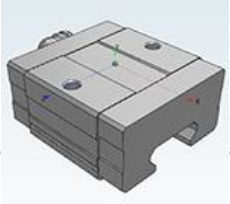

low installation linear guide

CAD plugins

With our CAD integrations, you can use 3Dfindit directly in your CAD system and make your work easier with additional comfort functions, such as replacing a part and many more.

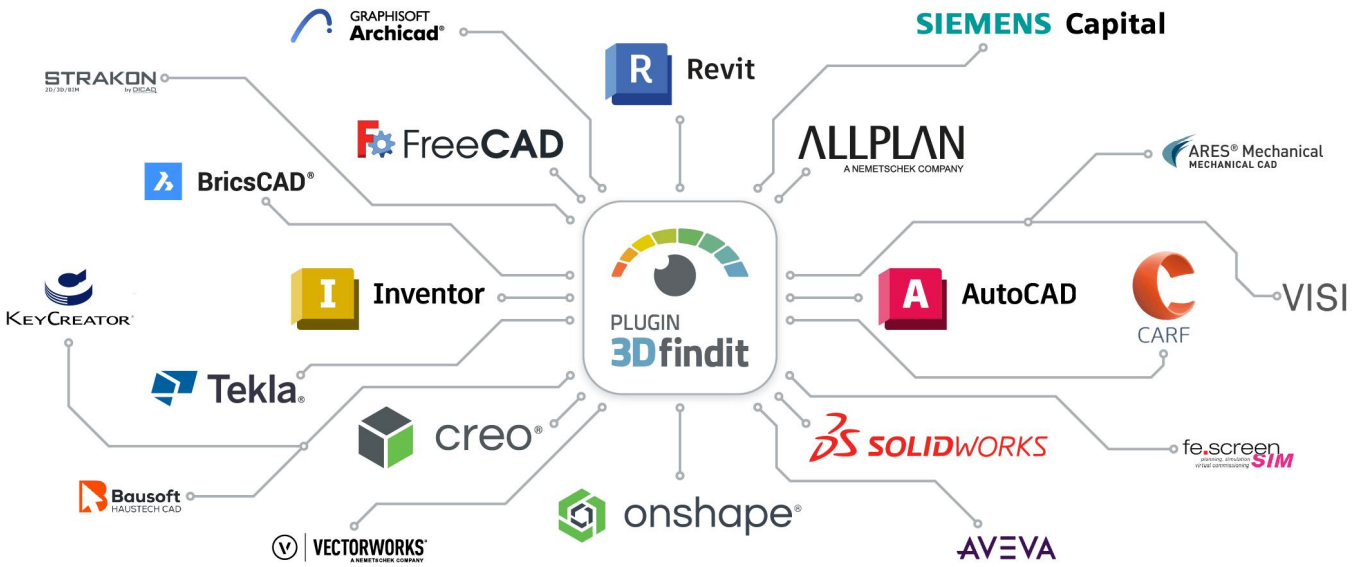

To the plugins